


# Using the Buttons

The front control panel contains the Power, Input Select, Menu, Freeze, Mute and volume control buttons.

No.	Name	SMART Board MX procedure
1	Power	Press to wake the display. Press to again enter Sleep mode.
2	Input select	Press to switch input source.
3	Menu	Press to open the display's settings.
4	Freeze	Press to freeze and unfreeze the screen. See <a href="#">Freezing the screen</a>
5	Mute	Press to mute or unmute the volume.
6	Volume decrease	Press to turn down the volume.
7	Volume increase	Press to turn up the volume.

image-1586805117246.png


You can use the buttons on the front control panel to increase and decrease the volume. You can also use the buttons on the remote control.

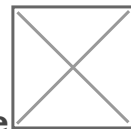

You can temporarily freeze the image on the screen by pressing the **Freeze** button on the front control panel (see [Front control panel](#)).

## NOTES

- Freezing the screen does not pause any applications that are running on the connected computer. It simply freezes the display of those applications.
- Touch and ink are still active.

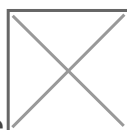

To unfreeze the screen, press the **Freeze** button on the front control panel again.

---

Revision #1

Created 13 April 2020 19:11:02 by Ethan Dancy

Updated 13 April 2020 19:17:11 by Ethan Dancy