

How to Calibrate Your SMART Board

Press and hold the two large pen tray buttons at the same time.

OR

Press the Help button on the pen tray, and then select Orient/Align the SMART Product.

The orientation screen opens.

[image-1586786401928.png](#)

2. Pick up a pen from the pen tray.

3. Beginning at the upper-left corner of the screen, touch the center of the target firmly with the tip of the pen until the target moves to the next point. Try not to flick the pen when you lift it from the screen, and make sure that the lift direction is at a right angle to the screen.

NOTES

- Although you can use your finger to orient your interactive whiteboard, a fine-point tool such as a pen tray pen provides greater precision when touching the targets.

Revision #1

Created 2020-04-13 13:57:56 UTC by Ethan Dancy

Updated 2020-04-13 14:00:30 UTC by Ethan Dancy